

CY3Z-M grades

TECHNICAL DATA SHEET

- 3% molar Y₂O₃ stabilized zirconia with high reactivity.
- Powder easy to process into feedstock for injection molding.
- YTZ ceramics with outstanding mechanical properties.

CHEMICAL ANALYSIS (ppm)

ZrO ₂ +HfO ₂ *	Y ₂ O ₃	Al ₂ O ₃ **	SiO ₂	Na ₂ O	TiO ₂	Fe ₂ O ₃	LOI
94.3%	5.4%	0.25%	≤200	≤200	≤50	≤50	≤1%

* by difference ** Al₂O₃: 0% for CY3Z-MS

PHYSICAL PROPERTIES

	CY3Z-MA	CY3Z-MS
Al ₂ O ₃ (wt%)	0.25	-
Specific surface area (m ² /g)	15	
Particle size distribution		
d50 (μm)*	0.2	
d98 (μm)*	<3.0	

*Analytical method: laser diffraction

APPLICATION PROPERTIES

- Ceramic sintering

	CY3Z-MA	CY3Z-MS
Sintering temperature (°C)	1350 - 2 hours	1400 - 2 hours
Ceramic density (g.cm ⁻³)	≥ 6.04	

Refer to our recommendations for thermal processing

- Mechanical properties of final ceramics

Hardness (HV03)*	Flexural strength (MPa)**	Fracture toughness K _{1C} (MPa.m ^{1/2})***
1250	> 1000	5.5

* Vickers indentation


** 3 points bending (6.5mm x 3.3mm x 25mm)

*** ISB (ASTM C1421)

SAFETY DATA SHEET AVAILABLE

PACKAGING

25 kg plastic drums.

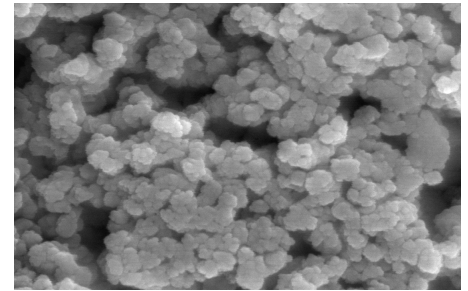

MAIN APPLICATIONS

- Ferrules for optical fiber connectors
- Small ceramic parts with fine structure
- Ceramic Injection Molding (CIM)

CERAMIC PROPERTIES

- High mechanical strength
- Wear & scratch resistance
- Smooth finishing

Saint-Gobain ZirPro is the expert in zirconia-based materials for industrial applications. From our global network of manufacturing, commercial and research facilities, we serve leading customers through long-term and trust-based relationships.

Saint-Gobain ZirPro (Handan) Co., Ltd.
N°8 Century Street
Economic Development Zone
056107 Handan - Hebei
China
Tel.: +86 31 08 06 60 02

SEPR Saint-Gobain ZirPro
B.P. 60025 - 84131 Le Pontet Cedex
France
Tel.: +33 (0)4 90 32 70 71
e-mail: zirpro@saint-gobain.com

<http://www.zirpro.com>

